

ADJUSTMENT SHEET

ATOMIKA K8000



VERTICAL ADJUSTMENT




Untighten the blocking screw **A** in all the hinges on the door leaf



Rotate the eccentric **B**



Tighten the blocking screw **A** in all the hinges (max 4 Nm)

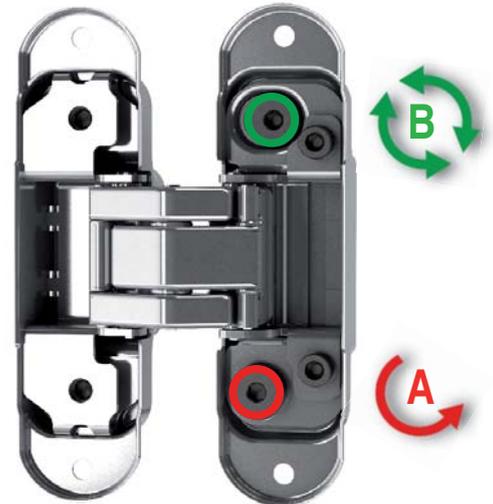


HORIZONTAL ADJUSTMENT



Rotate screws **C**

Note: do the same rotation with both screws

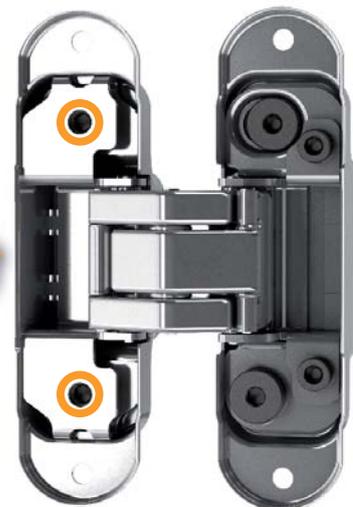

DEPTH ADJUSTMENT



Rotate the eccentrics **D**.

Note: do the same rotation with both eccentrics

